 



Consciot

User Manual

Solar Landscape Light WS002U

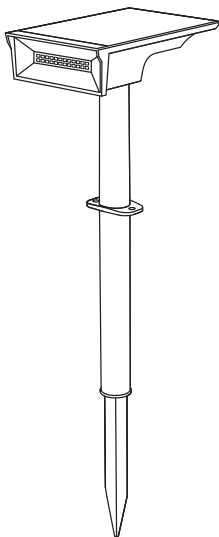

 
SPECIFICATION

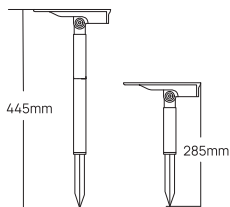

LED	24LEDs
Power	1W ($\pm 10\%$)
IP Rating	IP65
Working Temperature	$-25^{\circ}\text{C} \sim +45^{\circ}\text{C}$
Housing Material	ABS+PC
Mount Type	Ground/Wall

INTRODUCTION

This solar landscape light combines convenience with energy efficiency. Wire-free solar-powered design simplifies installation, and the adjustable angle allows for easy aiming so you can illuminate the wall perfectly and create the ideal lighting effect. Additionally, it senses the available light to turn on automatically from dusk until dawn.

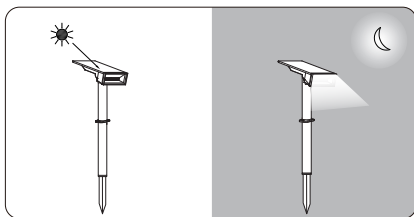

PACKAGE CONTENTS

- A. 4x Solar Landscape light
- B. 4x Plastic Rod1
- C. 4x Plastic Rod2
- D. 4x Plastic Spike
- E. 4x Knob
- F. 12x Expansion Bolt
- G. 12x Screw
- H. 4x Nut
- I. 1x User Manual



A



B



C



D



E



F



G



H




I

INSTALLATION

Press the button and select a desired mode. Then choose a place that can get enough sunshine to install the light, the more sunshine it gets, the longer it can illuminate.

Method 1: Ground Inserted

 
1. Fix solar landscape light and plastic rod1 by knob.
2. Connect the rods and spike in different combinations based on the height you need. then adjust the angle of the light and tighten the knob.

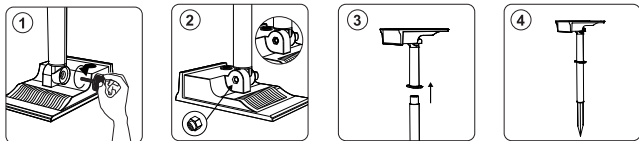

Note: Please insert the knob from the correct side as shown above.

Method 2: Wall Mounted

1. Use a drill bit to make two holes in the wall. Insert the provided expansion bolts into these holes.
2. Pass the screws through the screw holes of the rod1 and into the expansion bolts. Tighten the screws securely to firmly attach the bracket to the wall.
3. Adjust the angle of the light to your desired direction. Once positioned, tighten the rod1 and the light using the knob screw.

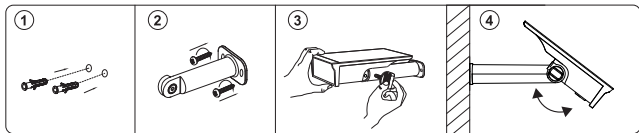

Note: Please insert the knob from the correct side as shown above.

Consciot

Our goal is to bring you the best shopping experience on Amazon. If you have any questions about our product, please feel free to contact us. Our customer service is right here to resolve the case.

- ☎ Call: +1 (866) 698-6211 (PST 9:00am-5:00pm, Monday to Friday)
- ✉ support@consciot.com
- 🌐 <https://www.consciot.com>
- @ Why not share your stories to help other buyers?




Made in China

SERIES MODEL INTRODUCTION

 This series features two models: RGB and CW (Cool White/Warm White). Please refer to the model you have purchased to adjust the light mode accordingly.


Model 1: RGB

 Short Press: Cycles through the following modes.

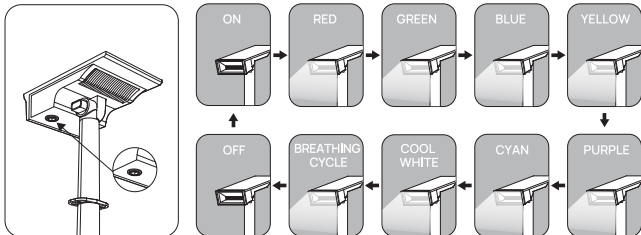


Model 2: CW (Cool White/Warm White)

Short Press: Cycles through the following brightness levels.

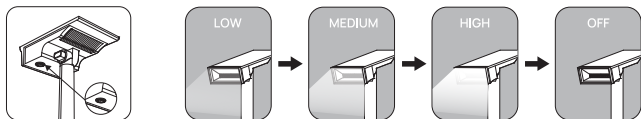

Long Press: Cycles through color temperatures every 2 seconds while holding the button. (While the lights are on.)

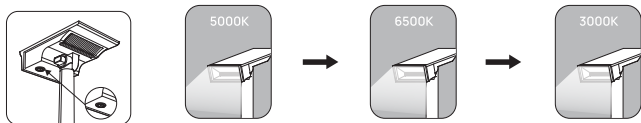

Releases the button to save the selected color temperature.

* The default color temperature is 5000K.

WARM TIPS

⚠ This light is designed to be waterproof and robust in structure, hence the battery is not replaceable!

1. Before using your landscape light for the first time, place it in direct sunlight for 3-5 days. This helps the battery charge fully and improves its lifespan, so landscape light works better and lasts longer.

2. During the installation, please make sure the landscape light is installed under direct sunlight where there is no shade or eave to shelter the solar panel. Otherwise, the lighting time will be shorter.

3. Whether the solar landscape lights can produce the best lighting effect or not depends on sunlight intensity, geographical location, weather conditions, seasons and other conditions.

TROUBLE SHOOTING

If the light doesn't turn on after a long period of inactivity, please try the following:

a) Place the solar panel directly under sunlight and leave it outdoors for 3 to 5 days.

b) The light will automatically reset the battery and related components.

c) Try pressing the power button again to turn it on.

d) If landscape light still doesn't work after following the steps above, please send a picture of the damaged product along with your order details to our customer service team. We'll get back to you within 1-2 business days with a quick solution.

风琴折

材质：80G双胶纸

折叠尺寸：100*138mm

印刷方式：单黑双面印刷

*红字部分不印刷